
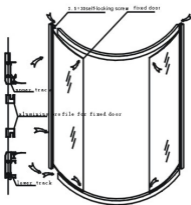
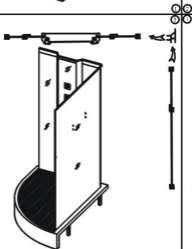
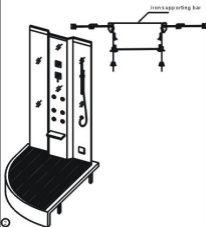


**Tools:** monkey wrench screw driver, Philips screw driver level bar PSP pipe( 2pcs)



Screw cover 5pcs	Stainless steel clip for fixing cover 7pcs	decorated cover 6pcs
12mm stainless steel spacer 10pcs	6*30 hexangular screw 5pcs	6mm hexangular nut 4pcs
4*10 round self-locking screw 32pcs	3.5*30 round self-locking screw 8pcs	
4*30 round self-locking screw 6pcs	4mm flat spacer	

1. left shower wall	8. waste	15. hand shower
2. aluminium profile	9. shower tray	16. shower bar
3. faucet	10. chromatherapy	17. right shower wall
4. glass door	11. cover	18. side shower wall
5. jet	12. ventilator	19. shampoo holder
6. folding seat	13. ceiling shower	20. steam nozzle
7. base board	14. speaker	21. stainless steel supporter

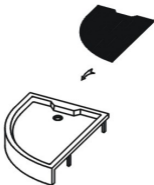

## Installation Procedure:

1. Put the shower tray on the installation floor, and put the pedal into it, then unfasten the nuts in the adjusting leg with monkey wrench. Make the tray parallel to the floor with the help of level bar. (As illustrated in drawing 1)
2. Get the aluminum profile and the left and right shower wall connected with self-locking screw, and fix the iron supporting bar on the shower wall. (As illustrated in drawing 2)
3. Get the side shower wall and the right shower wall connected with corner aluminum profile. (As illustrated in drawing 3)
4. Install and fix the fixed door, the tracks, and the two sides aluminum profile. (As illustrated in drawing 4)

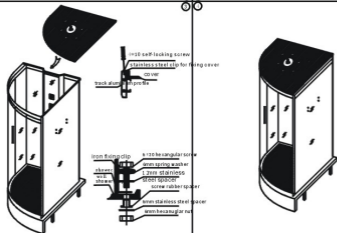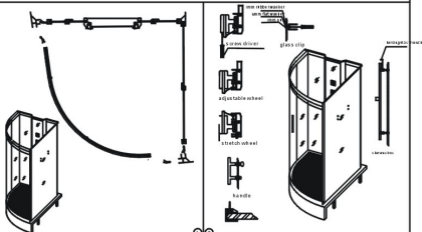

## Installation Procedure:

1. Get the upper & lower tracks, the fixed door and the side glass wall connected with the corner aluminum profile (As illustrated in drawing 1), and fix them with 4\*10 self-locking screw.
2. Install the shower bar, the left & right movable door and the handles (As illustrated in drawing 2) (Note: the wheel with spring is lower wheel and the adjustable one is upper wheel. hang the upper wheel onto the upper track, then press the lower wheel to hook the lower track. Adjust with screw driver if the left and right movable doors are not well close.)
3. Install the wood cover and the acrylic cover (As illustrated in drawing 3). Fix the acrylic cover with stainless steel clip.